

## DATA SHEET

### VAC-REG Vacuum Regulator

#### Description:


**Vac-Reg** has been designed to provide accurate, controlled vacuum for parts that use honeycomb core. **Vac-Reg** is a small in-line unit that is easy to use. Each part in the shop can be independently regulated using **Vac-Reg**. **Vac-Reg** uses standard ¼ in. NPT fittings and will accept **AQD 500**, **Airlock 450** or **Airlock 550** quick disconnect fittings.

#### Directions for Use:

Range of adjustment is 30" Hg to 5" Hg (-100 kPa to -17 kPa)

1. Attach quick disconnect couplings.
2. Connect vacuum hose.
3. Loosen locking ring and adjust thumb knob.
4. Tighten locking ring at the desired vacuum setting.
5. Attach coupling opposite the gauge to the vacuum bag.

Note: **Vac-Reg** is an inexpensive reference gauge for shop use only. Calibration is not available.

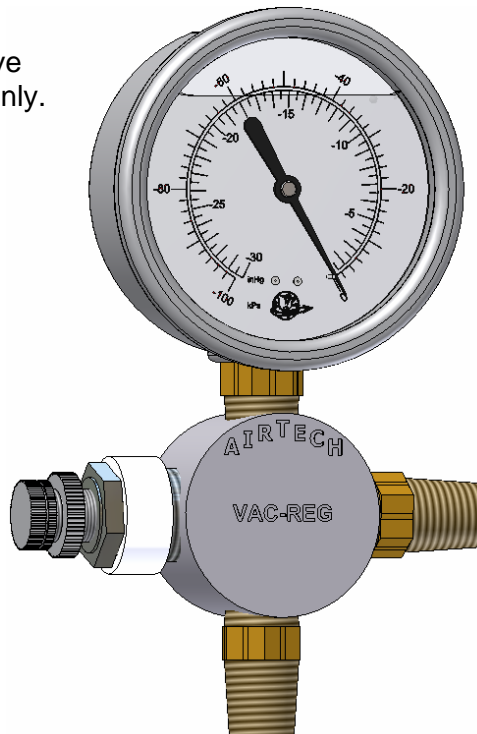

Note: **Vac-Reg** comes supplied as shown above with the **Vac-Gage** THA liquid filled vacuum gauge.

#### CATALOG POSITION: **VAC VALVES AND HOSES**

As the conditions or methods of use are beyond our control, Airtech International, Inc. does not assume any responsibility for the performance of this material for any particular use. The material is sold "as is". Airtech International, Inc. disclaims, and buyer waives, any and all implied warranties, including without limitation the implied warranties of merchantability and of fitness for particular use. The information contained herein represents typical properties and should not be used for specification purposes.

*MORE THAN A MANUFACTURER...A TECHNICAL PARTNER!*

